


1

Attach the rubber feet

A. Lay the Mini on its back. Push one screw from the top through the chamfered hole on the corner.


B. Press the rubber foot against the bottom of the board so the screw goes into the small hole.
C. Press the nut into the bottom of the foot and tighten screw slowly with a screwdriver just until foot is snug and does not turn. No need to over-tighten.

D. Repeat on the other side

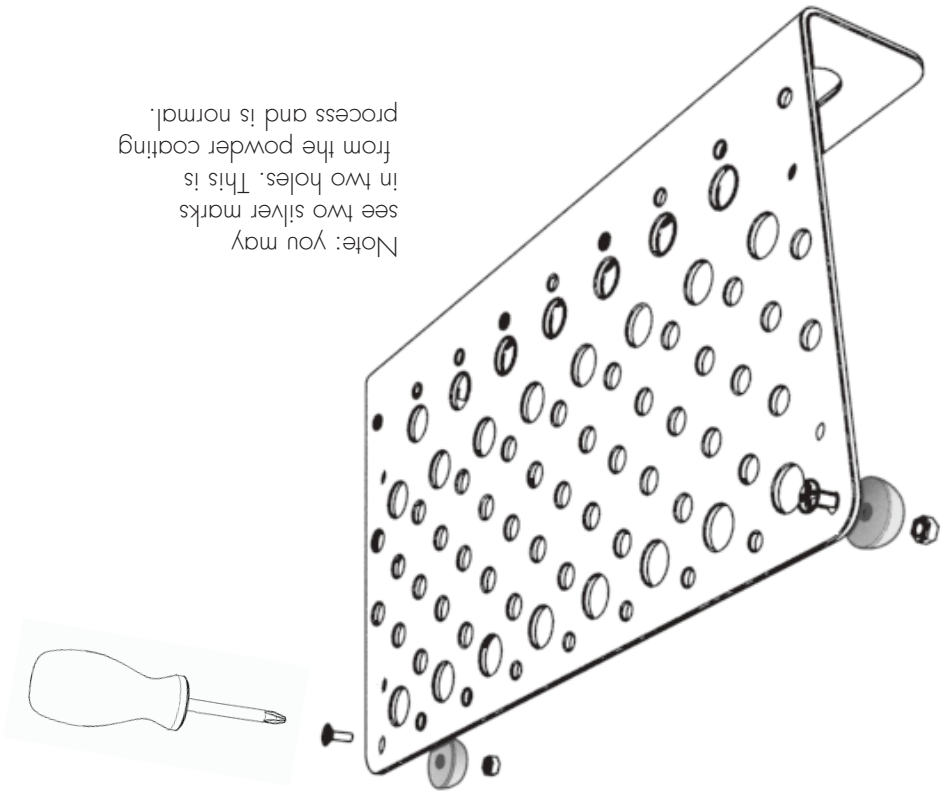


2

Attach C-Channel Feet

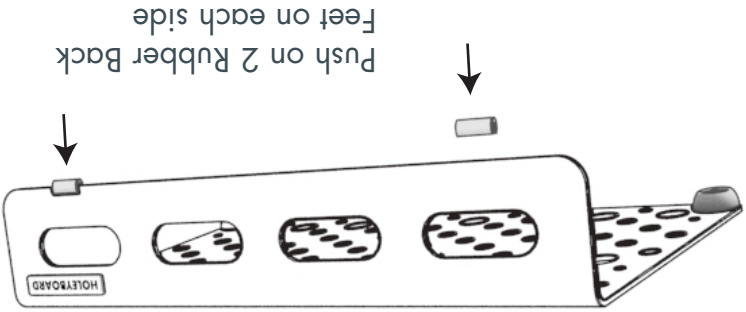


3

Add and remove power supplies and effects pedals at will using included zip ties or Hook & Loop.

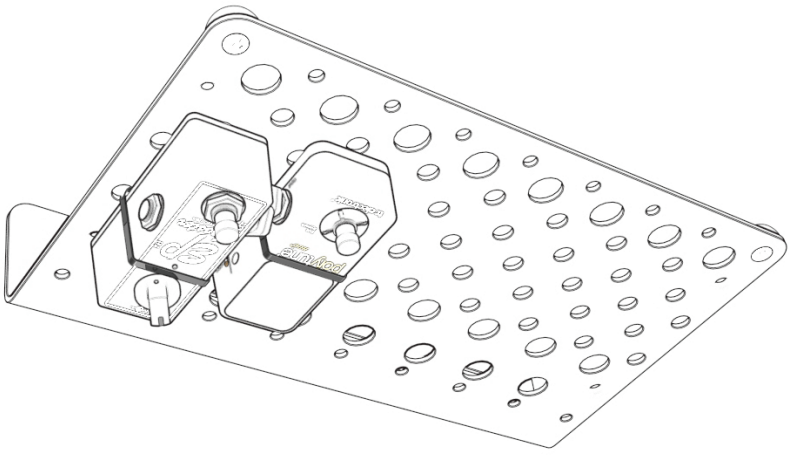

4

Attach two or more Minis together if desired with a Z-Connector (sold separately)

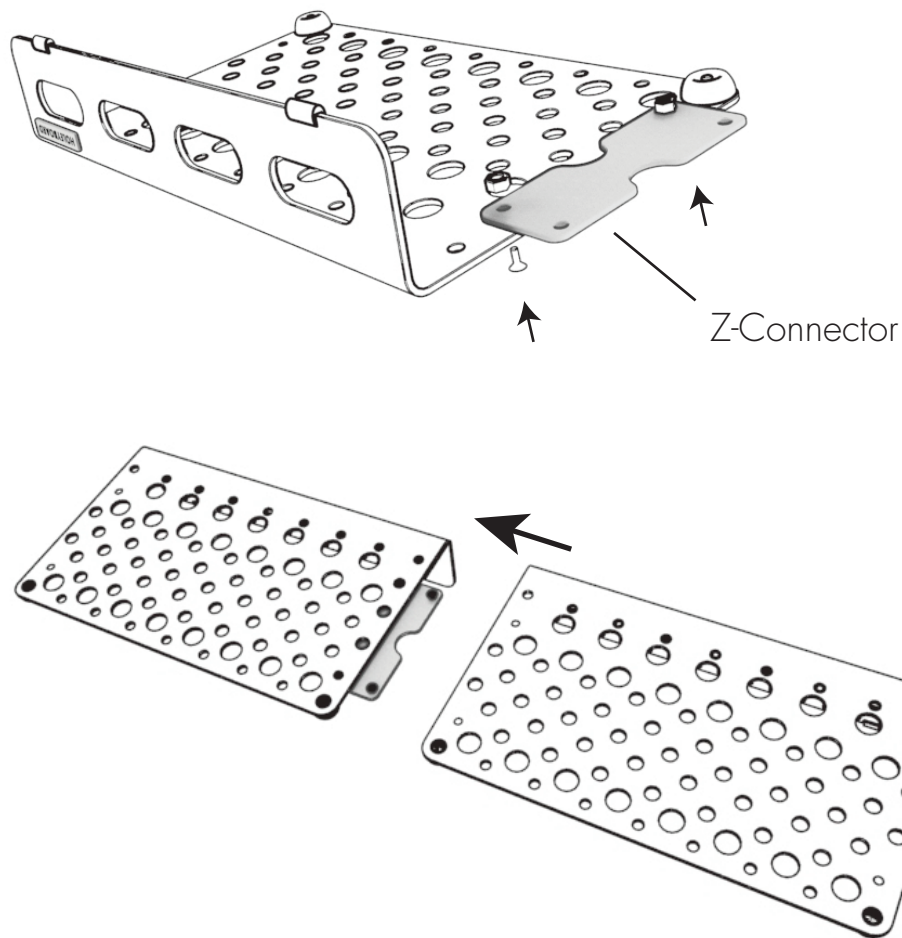

Chemistry Design Werks
2400 North 2nd Street STE 124
Minneapolis, MN 55411

1-888-519-3757

chris@holeyboardpedalboards.com




HOLEYBOARD[®]

Mini Instructions

A) Watch a Video

Check out my video "Holeyboard 123 Tips and Tricks". It is on my website under "Videos" at www.holeyboardpedalboards.com and it has a lot of good information on arranging pedals using cable ties effectively and working with power supplies. -Chris

B) Lay Out Parts

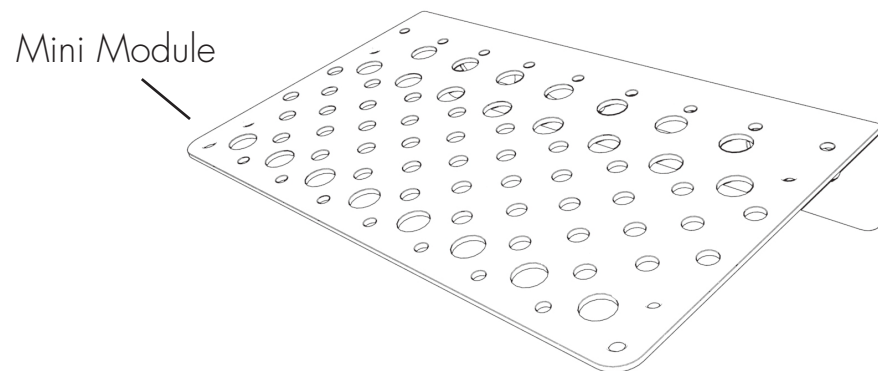

NOTE: Depending on the components you ordered, you may have varying numbers of the parts below.

Hardware

- 2 Rubber Feet
- 2 Large Tall Screws
- 2 Large Hex Nuts
- 2 Rubber C-Channel back feet